


MANIFOLD / BURNER TUBE REPLACEMENT INSTRUCTIONS

THIS PROCEDURE SHOULD ONLY BE PERFORMED BY AN AUTHORIZED WEBER-STEPHEN PRODUCTS LLC SERVICE TECHNICIAN

⚠ WARNING: GENUINE WEBER-STEPHEN REPLACEMENT PARTS MUST BE USED FOR ANY REPAIR OR REPLACEMENT. YOUR ACTIONS, IF YOU FAIL TO FOLLOW THIS PRODUCT WARNING, MAY CAUSE A FIRE, AN EXPLOSION, OR STRUCTURAL FAILURE RESULTING IN SERIOUS PERSONAL INJURY OR DEATH AS WELL AS DAMAGE TO PROPERTY. (WILL VOID ALL WARRANTY PROTECTION.)

△ DANGER: BEFORE PERFORMING ANY WORK MAKE SURE THE GAS SUPPLY IS TURNED OFF AT THE SOURCE.

FAILURE TO FOLLOW DANGERS, WARNINGS AND CAUTIONS CONTAINED IN THIS INSTRUCTION SHEET MAY CAUSE A
FIRE OR AN EXPLOSION RESULTING IN SERIOUS PERSONAL INJURY OR DEATH AS WELL AS DAMAGE TO PROPERTY.

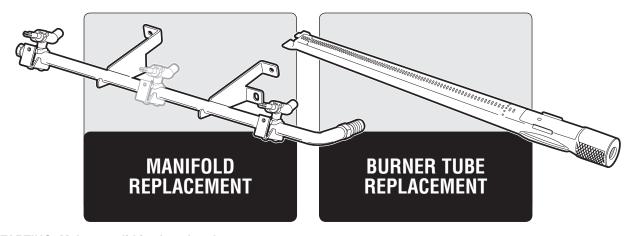

▲ BEFORE STARTING: Make sure lid is closed and casters are locked to prevent grill from moving.


NOTE: Grills illustrated may have slight differences than model purchased.

DISCONNECTION OF HOSE FROM GAS SOURCE

NORTH AMERICAN GRILLS


LP UNITS:

- A) Make sure gas supply is turned off at source.
- B) Disconnect LP cylinder from inside of cabinet base.
- C) Remove LP cylinder from cabinet base.

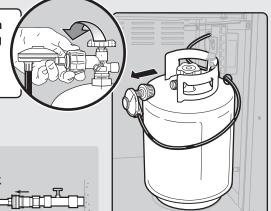

NG UNITS:

 - A) Make sure gas supply is turned off at source.
- B) Slide collar of quick-disconnect back to remove flexible gas supply hose from gas source.



EXPORT GRILLS

LPG UNITS:

- ▲ WARNING: Make sure that the LPG cylinder or regulator valve is closed.
- A) Remove the gas supply cylinder by shutting off the gas supply and disconnecting the hose and regulator assembly from the cylinder.

Identify your regulator type. Follow the disconnection instructions for that regulator.

Disconnect by Turning Anti-Clockwise

Unscrew regulator from cylinder by turning fitting anti-clockwise (1).

Disconnect by Turning Clockwise

Unscrew regulator from cylinder by turning fitting clockwise (2) (3).


Disconnect by Turning Lever

Turn regulator lever to the down/off position (4). Push in on regulator lever (5) until it releases from the cylinder (6).

Disconnect by Sliding Collar

Make sure regulator lever is in the off position (7) (9). Slide the collar of the regulator up (8) (10) to disconnect from the cylinder.

B) Remove LPG cylinder.

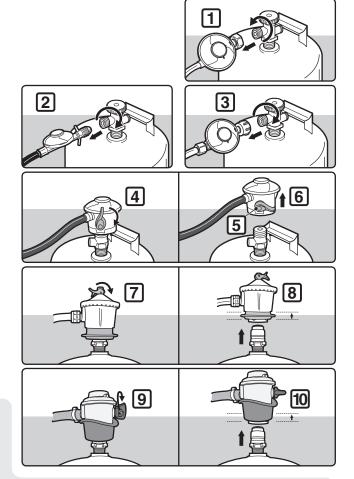

NG UNITS:


A) Make sure gas supply is turned off at source.

Manual Shut-Off Valve


- B) Disconnect flexible gas supply hose from manual shut-off valve (11). Refer to instructions included with your flexible gas supply hose.
- OR —

Gas Outlet Valve

B) Disconnect flexible gas supply hose from gas outlet valve (12). Pull plug out to disengage hose from cover plate. (This automatically shuts off gas.) Refer to instructions included with your flexible gas supply hose.

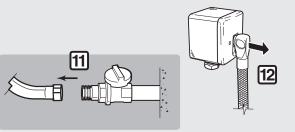


LID ASSEMBLY AND COOKBOX COMPONENTS REMOVAL

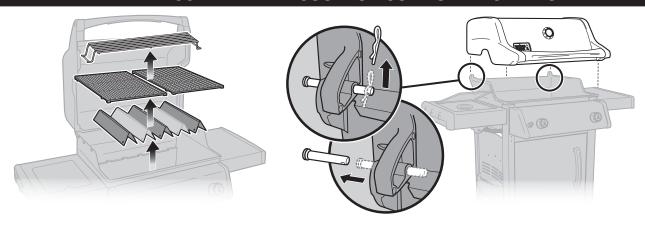


3

CONTROL PANEL REMOVAL

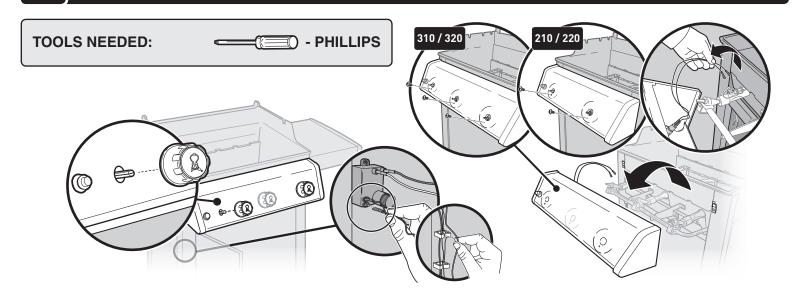

4


MANIFOLD REMOVAL

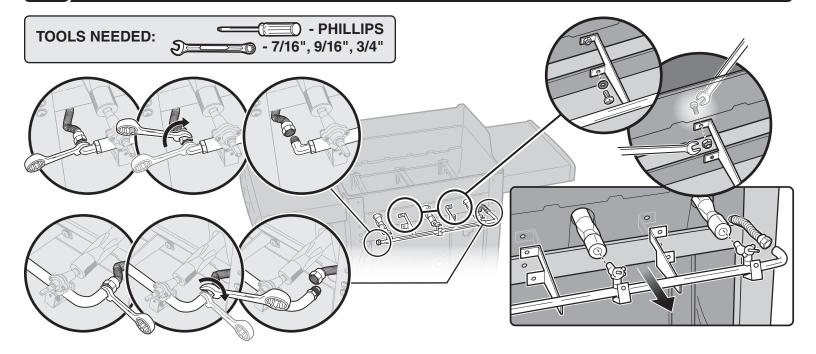




BURNER TUBE REMOVAL

 
310/320

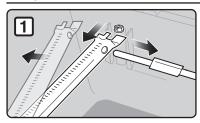








210/220

 

 


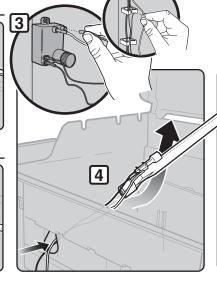


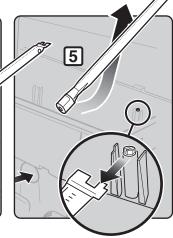

IGNITER ELECTRODE REMOVAL

REMOVAL NOTE: If igniter electrode assembly does not easily slide out from mounting bracket, use a small pair of pliers or channel locks to grasp metal igniter bracket of igniter electrode assembly.

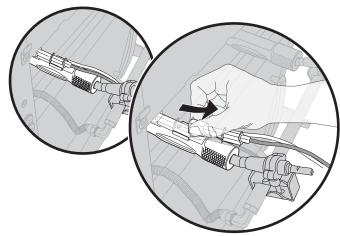


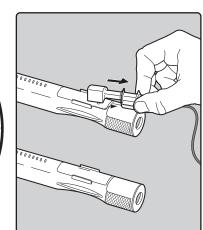


IGNITER ELECTRODE REINSTALLATION

VISUAL CHECK: SEE IF IGNITER BRACKET STOP ON IGNITER ELECTRODE IS FLUSH WITH BURNER TUBE


MOUNTING BRACKET.

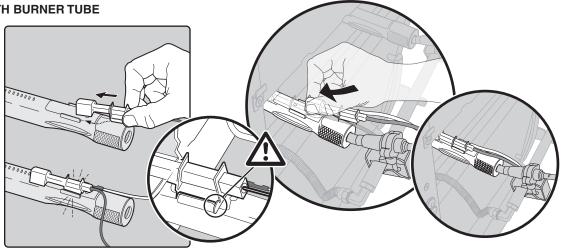

BURNER TUBE INSTALLATION

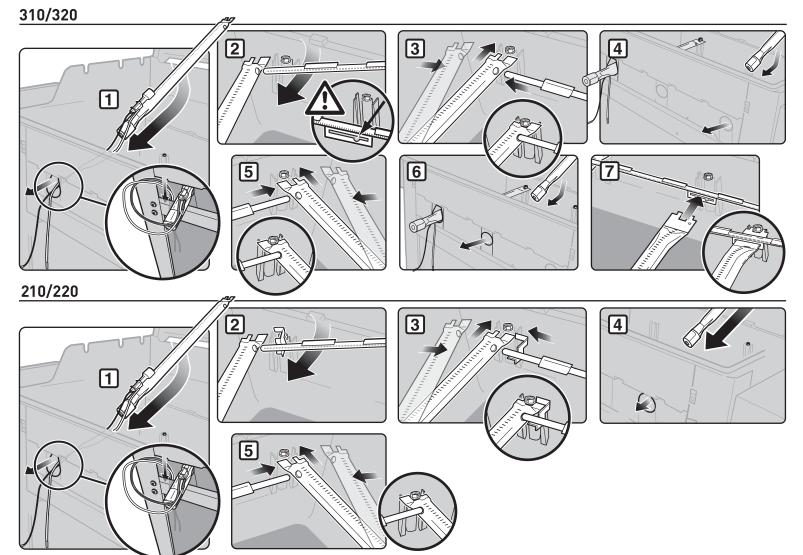

MANIFOLD INSTALLATION

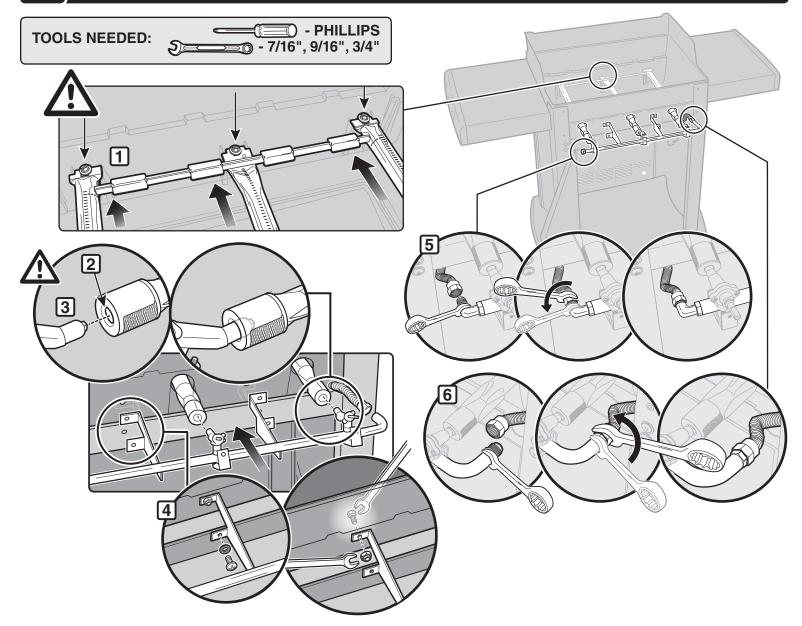

CAUTION: Burner tube openings (2) must be positioned properly over valve openings (3).

WARNING: Make sure all control knobs are turned to the OFF position before reconnecting gas supply and operating grill. Your actions, if you fail to follow this Product Warning, may cause a fire, an explosion, or structural failure resulting in serious personal injury or death as well as damage to property.

10


CONNECTION OF HOSE TO GAS SOURCE

NORTH AMERICAN GRILLS

LP UNITS:

- A) Reinstall LP cylinder into cabinet base.
- B) Screw regulator coupling onto cylinder valve; turn clockwise, or to the right.

⚠ WARNING: Do not use a wrench to tighten connection. Using a wrench could damage regulator coupling and could cause a leak.

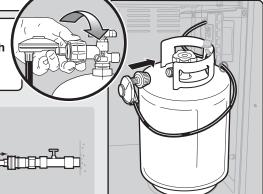

NG UNITS:

A) Slide collar of quick-disconnect back and reconnect flexible gas supply hose.

EXPORT GRILLS

LPG UNITS:

MARNING: Make sure that the LPG cylinder or regulator valve is closed.

A) Connect regulator to LPG cylinder.

Some regulators push ON to connect and pull OFF to disconnect; others have a nut with a left-hand thread that connects to the cylinder valve.

Identify your regulator type and follow one of the connection instructions specific to that regulator.

Connect by Turning Clockwise

Screw regulator onto cylinder by turning fitting clockwise (1). Position the regulator so that the vent hole (2) faces down.

Connect by Turning Anti-Clockwise

Screw regulator onto cylinder by turning fitting anti-clockwise (3) (4).

Connect by Pushing Lever/Snapping into Position

Turn regulator lever (5) to the down/off position. Push regulator down on cylinder valve until regulator snaps into position (6).

Connect by Sliding Collar

Make sure regulator lever is in the off position (7) (10). Slide the collar of the regulator up (8) (11). Push the regulator down onto the cylinder valve and maintain pressure. Slide collar down to close (9) (12). If regulator does not lock, repeat procedure.

NG UNITS:

A) Make sure gas supply is turned off at source.


Manual Shut-Off Valve

 
B) Connect flexible gas supply hose to manual shut-off valve (13). Refer to instructions included with your flexible gas supply hose.

— OR —

Gas Outlet Valve

B) Connect flexible gas supply hose to gas outlet valve (14). Insert plug into circular receptacle on cover plate, slide plug upward, and push plug in to engage. Refer to instructions included with your flexible gas supply hose.

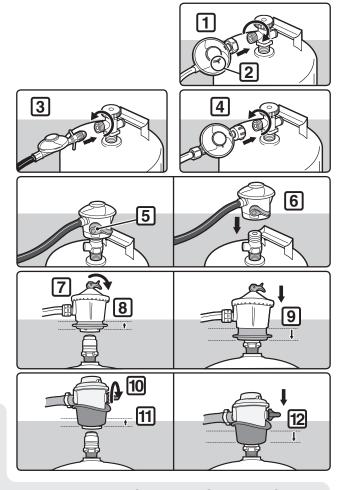



11

CHECK FOR GAS LEAKS

△ DANGER

Do not use an open flame to check for gas leaks. Be sure there are no sparks or open flames in the area while you check for leaks. Sparks or open flames will result in a fire or explosion, which can cause serious bodily injury or death and damage to property.

You will need: a soap and water solution and a rag or brush to apply it.

- A) Mix soap and water.
- B) Turn gas supply on at source.
- C) Check for leaks by wetting fittings with soap and water solution and watching for bubbles. If bubbles form, or if a bubble grows, there is a leak. NOTE: When leak checking is complete, turn gas supply off at the source and rinse connections with water.


Check:


- D) Hose-to-Bulkhead connection (1).
- E) Main gas line-to-Bulkhead connection (2).
- F) Main gas line-to-Manifold connection (3).
- G) Side burner line-to-Manifold connection (4).
- H) Side burner valve-to-Side burner line connection (5).
- ⚠ DANGER: If there is a leak at connection (1,2,3,4 or 5),
 retighten the fitting with a wrench and recheck for leaks with
 soap and water solution. If a leak persists, turn OFF the gas.

 <u>DO NOT OPERATE THE BARBEQUE</u>. Failure to follow dangers,
 warnings and cautions contained in this Instruction sheet may
 cause a fire or an explosion resulting in serious personal injury
 or death as well as damage to property. Contact the Customer
 Service Representative in your area using the contact
 information on our website. Log onto www.weber.com[®].
- E) Valves-to-manifold connections (6).
- F) Regulator-to-cylinder connections (7) (10).
- G) Regulator hose-to-regulator connections (8) (11).
- H) Flexible gas supply hose to gas supply connection (9) (12).


When leak checks are complete, turn gas supply OFF at the source and rinse connections with water.

▲ IMPORTANT: To do a proper leak check, the control panel must be removed. After checking for leaks, replace the control panel and control knobs.

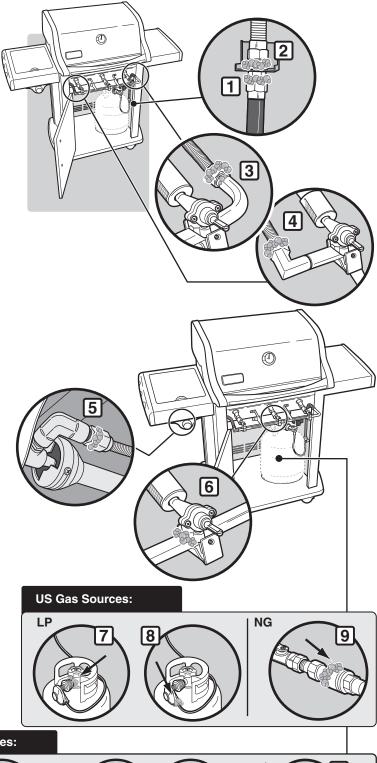

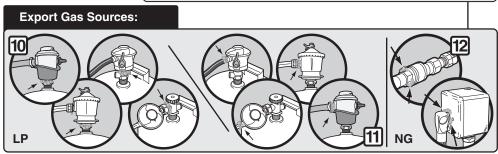


CONTROL PANEL REINSTALLATION

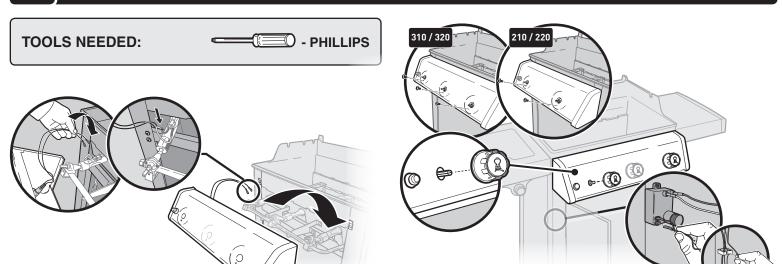

13


CHECK IGNITOR WIRES

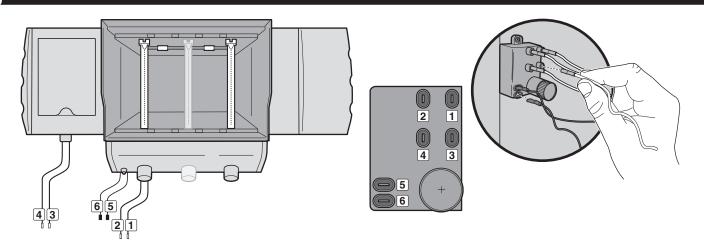

REASSEMBLY NOTE: After completely checking igniter wires, check for igniter spark. Push down on igniter button, listen for a clicking sound, and check for a spark at ceramic igniter. If you hear a click and see a spark, igniter module is working.

14

LID ASSEMBLY AND COOKBOX COMPONENTS REINSTALLATION

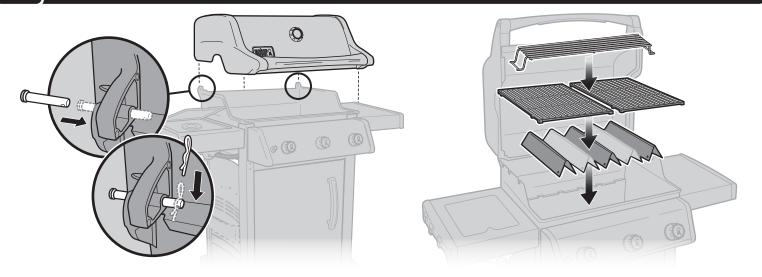



Visit



WEBER-STEPHEN PRODUCTS LLC www.weber.com®

For All of Your Grilling Needs

△ ATTENTION: This product has been safety-tested and is only certified for use in a specific country. Refer to country designation located on outside of box.

These parts may be gas-carrying or gas-burning components. Please contact Weber-Stephen Products LLC Customer Service Department for genuine Weber-Stephen Products LLC replacement part(s) information.

⚠ WARNING: Do not attempt to make any repair to gas-carrying or gas-burning components without contacting Weber-Stephen Products LLC Customer Service Department. Your actions, if you fail to follow this product warning, may cause a fire or an explosion resulting in serious personal injury or death and damage to property.



This symbol indicates that the product cannot be disposed of with household refuse. For instructions regarding proper disposal of this product in Europe, please visit www.weber.com°, and contact the importer listed for your country. If you do not have internet access, contact your dealer for the importer's name, address and telephone number.

When you decide to dispose of or discard your barbeque, all electrical components (e.g., rotisserie motor, batteries, ignition module, handle lights) must be removed and disposed of properly according to WEEE. They should be disposed of separately from the barbeque.

WEBER-STEPHEN ÖSTERREICH GMBH

Maria-Theresia-Straße 51 4600 Wels AUSTRIA

TEL: +43 7242 890 135 0; info-at@weberstephen.com

WEBER-STEPHEN PRODUCTS BELGIUM SprI

Blarenberglaan 6 Bus 4 Industriezone Noord BE-2800 Mechelen BEI GILIM

TEL: +32 015 28 30 90; infobelux@weberstephen.com

WEBER-STEPHEN CZ & SK spol. s r.o.

U Hajovny 246 25243 Průhonice CZECH REPUBLIC

TEL: +42 267 312 973: info-cz@weberstephen.com

WEBER-STEPHEN NORDIC ApS

Bøgildsmindevej 23, DK-9400 Nørresundby

TEL: +45 99 36 30 10; info@weberstephen.dk

WEBER-STEPHEN NORDIC MIDDLE EAST

Ras Al Khaimah FTZ P.O. Box 10559 UNITED ARAB EMIRATES TEL: +971 4 360 9256; info@weberstephen.ae

WEBER-STEPHEN FRANCE SAS

Eragny sur Oise – BP 80322 95617 Cergy Pontoise Cedex FRANCE TÉL: +33 810 19 32 37 service.consommateurs@weberstephen.com

WEBER-STEPHEN DEUTSCHLAND GmbH

Rheinstraße 194 55218 Ingelheim DEUTSCHLAND

TEL: +49 6132 8999 0; info-de@weberstephen.com

WEBER-STEPHEN NETHERLANDS B.V.

Tsjûkemarwei 12 8521 NA Sint Nicolaasga Postbus 18 8520 AA Sint Nicolaagsa NETHERLANDS

TEL: +31 513 4333 22; info@weberbarbecues.nl

JARN & GLER WHOLESALE EHF

Skutuvogur 1H 1-104 Reykjavik ICELAND TEL: +354 58 58 900

D&S IMPORTS

14 Shenkar Street Petach, Tikva 49001 ISRAEL

TEL: +972 392 41119; info@weber.co.il

WEBER-STEPHEN PRODUCTS ITALIA Srl

Centro Polifunzionale "Il Pioppo" Viale della Repubblica 46 36030 Povolaro di Dueville – Vicenza

TEL: +39 0444 360 590; info-italia@weberstephen.com

WEBER-STEPHEN POLSKA Sp. z o.o.

Ul. Trakt Lubelski 153 04-766 Warszawa POLSKA

TEL: +48 22 392 04 69; info-pl@weberstephen.com

GALACTEX OUTDOOR (PTY) LTD.

141-142 Hertz Draai Meadowdale, Edenvale Gauteng SOUTH AFRICA

TEL: +27 11 454 2369; info@weber.co.za

WEBER-STEPHEN IBERICA Srl

Avda. de les Corts Catalanes 9-11 -Despacho 10 B E-08173 Sant Cugat del Vallès Barcelona

TEL: +34 93 584 40 55; infoiberica@weberstephen.com

WEBER-STEPHEN SCHWEIZ GMBH

Talackerstr. 89a 8404 Winterthur SWITZERLAND

TEL: +41 52 24402 50; info-ch@weberstephen.com

WEBER-STEPHEN PRODUCTS (U.K.) LIMITED

The Four Columns,
Broughton Hall Business Park
Skipton, North Yorkshire BD23 3AE
UNITED KINGDOM
TEL: +44 01756 692611;
Customerservicenwe@weberstenhen.com

WEBER-STEPHEN PRODUCTS LLC

200 East Daniels Road Palatine, IL 60067-6266 USA TEL: 847 934 5700; support@weberstephen.com

OOO WEBER-STEPHEN Vostok

142784 Moscow Region, Leninskiy District Rumyantsevo Village Building 1 RUSSIA TEL: +7 495 973 16 49; info.ru@weberstephen.com

WEBER-STEPHEN MAGYARORSZÁG KFT.

1138 Budapest, vaci ut 186. HUNGARY TEL: +36 70 / 70-89-813; info-hu@weberstephen.com

For Republic of Ireland, please contact: Weber-Stephen Products (U.K.) Limited.

For other eastern European countries, such as ROMANIA, SLOVENIA, CROATIA, TURKEY, or GREECE, please contact: Weber-Stephen Deutschland GmbH, info-EE@weberstephen.com.

For Baltic States, please contact: Weber-Stephen Nordic ApS.



© 2012 Designed and engineered by Weber-Stephen Products LLC, a Delaware limited liability company, located at 200 East Daniels Road, Palatine, Illinois 60067 U.S.A.